

Seatbelt Solutions

www.seatbeltsolutions.com

1983-1992 CAMARO BUCKET SEAT FRONT 3 POINT SINGLE RETRACTOR INSTALLATION INSTRUCTIONS

DISASSEMBLY


1. REMOVE TRIM AT UPPER RETRACTOR AND REMOVE RETRACTOR FROM ROOF STRUCTURE.
SET HARDWARE IN A SAFE PLACE TO BE USED WHEN REASSEMBLING.
2. OPEN COVER IN REAR OF LAP RETRACTOR HOUSING, REMOVE BOLT HOLDING RETRACTOR IN PLACE.
REMOVE ASSEMBLY FROM CAR, CUT WEBBING BETWEEN LAP RETRACTOR AND TONGUE.
3. DRILL OUT RIVET IN SIDE OF RETRACTOR HOUSING AND DROP RETRACTOR OUT BOTTOM.

REASSEMBLY

ASSEMBLE RETRACTOR AND FLOOR ANCHOR WITHOUT HARDWARE TO FAMILIARIZE YOURSELF WITH THE WAY THE SEATBELT SOLUTIONS RETROFIT SEAT BELT INSTALLS IN YOUR CAR.


4. ATTACH HOUSING MOUNT BRACKET TO HOUSING WITH #8-32 SCREW, TAKING NOTE THE BRACKET IS INSTALLED PARALLEL WITH THE SILL PLATE (BOTTOM) EDGE OF THE HOUSING.
5. SLIP ANCHOR THROUGH WEB SLOT IN RETRACTOR HOUSING AND BOLT IN PLACE OF ORIGINAL LAP RETRACTOR.
6. ATTACH NEW RETRACTOR TO ROOF STRUCTURE USING ORIGINAL HARDWARE, USING CARE TO NOT TWIST SEATBELT WEBBING, AND REASSEMBLE HEADLINER TRIM PARTS.

INSTALL SCREW FROM
OUTSIDE OF HOUSING INTO
BRACKET

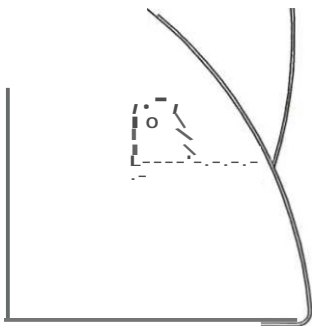

SIDE VIEW OF RETRACTOR HOUSING

FEED ANCHOR THROUGH SLOT IN
RETRACTOR HOUSING

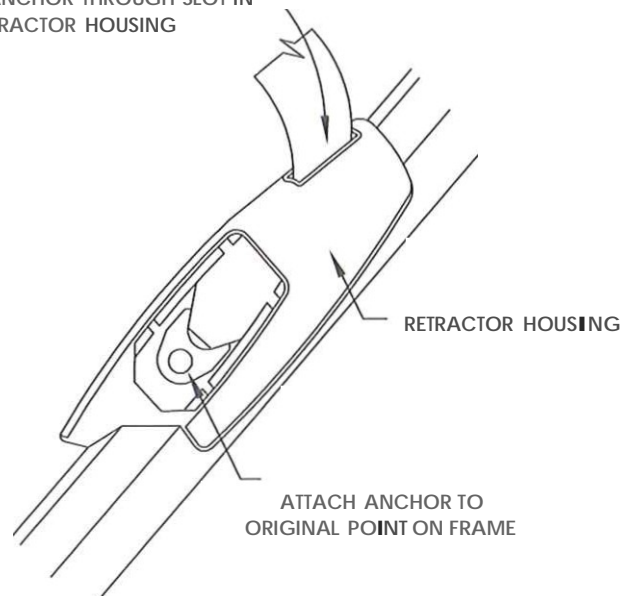



1983-1992 CAMARO BUCKET SEAT FRONT 3 POINT SINGLE RETRACTOR INSTALLATION INSTRUCTIONS


DISASSEMBLY

1. REMOVE TRIM AT UPPER RETRACTOR AND REMOVE RETRACTOR FROM ROOF STRUCTURE.
SET HARDWARE IN A SAFE PLACE TO BE USED WHEN REASSEMBLING.
2. OPEN COVER IN REAR OF LAP RETRACTOR HOUSING, REMOVE BOLT HOLDING RETRACTOR IN PLACE.
REMOVE ASSEMBLY FROM CAR, CUT WEBBING BETWEEN LAP RETRACTOR AND TONGUE.
3. DRILL OUT RIVET IN SIDE OF RETRACTOR HOUSING AND DROP RETRACTOR OUT BOTTOM.


REASSEMBLY

ASSEMBLE RETRACTOR AND FLOOR ANCHOR WITHOUT HARDWARE TO FAMILIARIZE YOURSELF WITH THE WAY THE SEATBELT SOLUTIONS RETROFIT SEAT BELT INSTALLS IN YOUR CAR.

4. ATTACH HOUSING MOUNT BRACKET TO HOUSING WITH #8-32 SCREW, TAKING NOTE THE BRACKET IS INSTALLED PARALLEL WITH THE SILL PLATE (BOTTOM) EDGE OF THE HOUSING.
5. SLIP ANCHOR THROUGH WEB SLOT IN RETRACTOR HOUSING AND BOLT IN PLACE OF ORIGINAL LAP RETRACTOR.
6. ATTACH NEW RETRACTOR TO ROOF STRUCTURE USING ORIGINAL HARDWARE, USING CARE TO NOT TWIST SEATBELT WEBBING, AND REASSEMBLE HEADLINER TRIM PARTS.

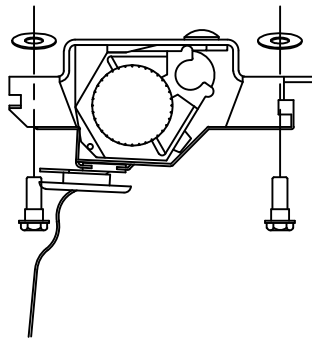

INSTALL SCREW FROM
OUTSIDE OF HOUSING INTO
BRACKET

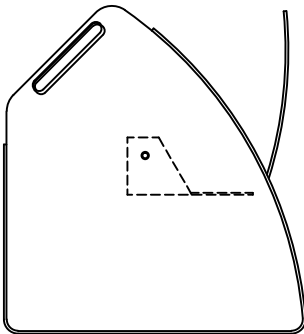

SIDE VIEW OF RETRACTOR HOUSING

FEED ANCHOR THROUGH SLOT
IN RETRACTOR HOUSING

